


**LED indicators**

- Green ready LED  
Flashing - Supply available  
Steady - Main available
- Green run LED  
Flashing - Ramping up/down  
Steady - TOR
- Yellow protection LED
- Red fault LED

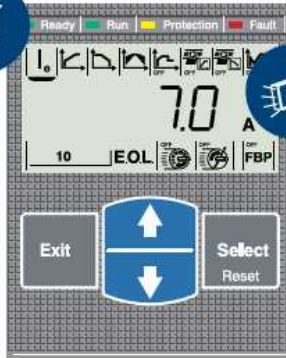

**Illuminated and language-neutral display with icons**

The display on PSE uses icons for fast and easy set-up of parameters. Each icon indicates a different parameter to set and makes navigation and setting of parameters easy. Set-up is done by using the four buttons on the keypad.