


Adjustment note for CCST board


 Live parts. Pull the power plug when working on the circuit board.

CCST circuit board with fixed on / off time



(1) Option "potential-free"

CCST board with adjustable switch-on / switch-off time and switch-on threshold

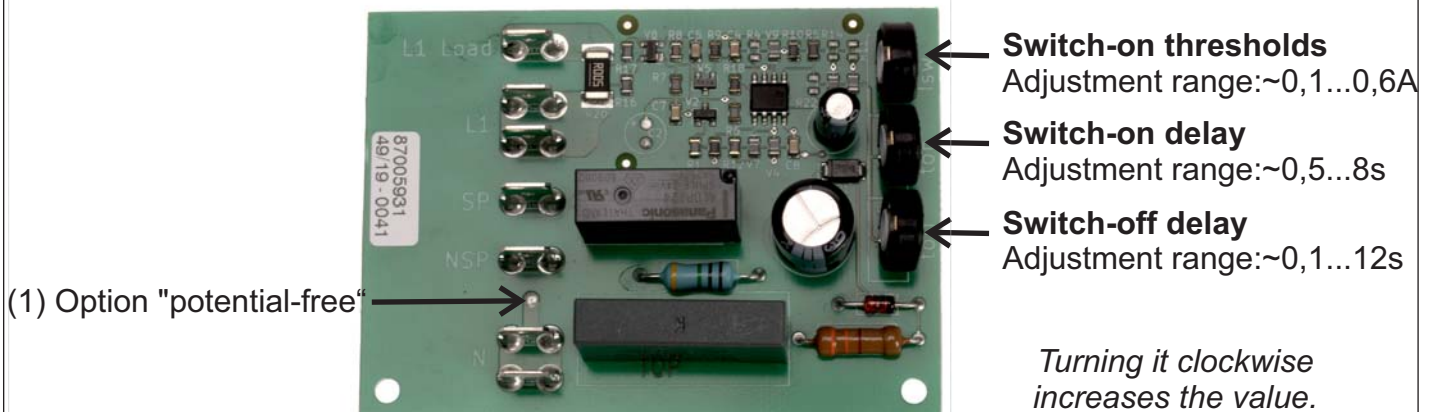

(1) Option "potential-free"

Switch-on thresholds
Adjustment range:~0,1...0,6A

Switch-on delay
Adjustment range:~0,5...8s

Switch-off delay
Adjustment range:~0,1...12s

Turning it clockwise increases the value.

(1) If a potential-free switching contact is required, the bridge (plated through hole) between the connections N and NSP must be separated with a 3mm drill. The copper ring around the hole should be completely removed. The switching contact of the relay is then between SP and NSP.

		17.03.2020 Kowarsch	Steuerplatine CCST
		 KLINGER BORN	